

## Computer configuration:

### Minimum:

**OS:** Window 7/Window 10 64bits  
**Internal Memory:** 8G  
**CPU:** Inter i3-8100/ AMD-9370 or above  
**Graphics card:** GTX660/RX460 or above  
**Hard disk:** 1T or above

### Recommended configuration:

**OS:** Windows 7/Windows 10 64bits  
**Internal memory:** 16GB or above  
**CPU:** Inter i5-8600/ AMD R5-1600 or above  
**Graphics card:** GTX1070/RX Vega 56  
**Hard disk:** 1T or above

1<sup>st</sup>, double click" RobotSLAM\_Server\_V1.0.0-Setup-x64.exe" to install it;

2<sup>nd</sup>, double click" RobotSLAM Engine\_V1.1.9-Update-EN.exe" to install it, select "English(US) or English(UK)"; click "下一步(Next)"; set the installation path,

